



Transmitter



Receiver

Trouble Shooting the FM!



Transmitter



Receiver

Trouble Shooting the FM!



Transmitter



Receiver

Trouble Shooting the FM!



Transmitter



Receiver

Trouble Shooting the FM!

TRY THIS FIRST. IF ALL ELSE FAILS....

TRANSMITTER TROUBLE SHOOTING

- Is the transmitter “on”?
- Is the transmitter on the correct frequency?
- Does the transmitter have a charge?
- Is microphone 4” from your mouth?
- Is the microphone cord (antennae)unwound and not kinked
- Is the microphone in the “on”

positions ( or )

- Not The X

RECEIVER TROUBLE SHOOTING

- Is the earmold “icky”? Change the wax trap.
- Do you need a new battery?
- Is the battery in the right way?
 - (+ goes up)
- Do you need to “sync” the transmitter and receiver?

iSense Beep Vocabulary:

3 beeps every 5 secs= replace wax trap

3 long beeps = replace battery

.....THEN CALL OR EMAIL

TRY THIS FIRST. IF ALL ELSE FAILS....

TRANSMITTER TROUBLE SHOOTING

- Is the transmitter “on”?
- Is the transmitter on the correct frequency?
- Does the transmitter have a charge?
- Is microphone 4” from your mouth?
- Is the microphone cord (antennae)unwound and not kinked
- Is the microphone in the “on”

positions ( or )

- Not The X

RECEIVER TROUBLE SHOOTING

- Is the earmold “icky”? Change the wax trap.
- Do you need a new battery?
- Is the battery in the right way?
 - (+ goes up)
- Do you need to “sync” the transmitter and receiver?

iSense Beep Vocabulary:

3 beeps every 5 secs= replace wax trap

3 long beeps = replace battery

.....THEN CALL OR EMAIL

TRY THIS FIRST. IF ALL ELSE FAILS....

TRANSMITTER TROUBLE SHOOTING

- Is the transmitter “on”?
- Is the transmitter on the correct frequency?
- Does the transmitter have a charge?
- Is microphone 4” from your mouth?
- Is the microphone cord (antennae)unwound and not kinked
- Is the microphone in the “on”

positions ( or )

- Not The X

RECEIVER TROUBLE SHOOTING

- Is the earmold “icky”? Change the wax trap.
- Do you need a new battery?
- Is the battery in the right way?
 - (+ goes up)
- Do you need to “sync” the transmitter and receiver?

iSense Beep Vocabulary:

3 beeps every 5 secs= replace wax trap

3 long beeps = replace battery

.....THEN CALL OR EMAIL

TRY THIS FIRST. IF ALL ELSE FAILS....

TRANSMITTER TROUBLE SHOOTING

- Is the transmitter “on”?
- Is the transmitter on the correct frequency?
- Does the transmitter have a charge?
- Is microphone 4” from your mouth?
- Is the microphone cord (antennae)unwound and not kinked
- Is the microphone in the “on”

positions ( or )

- Not The X

RECEIVER TROUBLE SHOOTING

- Is the earmold “icky”? Change the wax trap.
- Do you need a new battery?
- Is the battery in the right way?
 - (+ goes up)
- Do you need to “sync” the transmitter and receiver?

iSense Beep Vocabulary:

3 beeps every 5 secs= replace wax trap

3 long beeps = replace battery

.....THEN CALL OR EMAIL