



Trouble Shooting the FM!



Trouble Shooting the FM!



Trouble Shooting the FM!



Trouble Shooting the FM!

TRY THIS FIRST. IF ALL ELSE FAILS....

**TRANSMITTER TROUBLE
SHOOTING**

- Is the transmitter in the “on” position?
- Is the transmitter on the correct frequency?
- Does the transmitter have a charge?
- Is the microphone 4” from your mouth?
- Is the cord (antennae) for the microphone unwound and not kinked

**RECEIVER TROUBLE
SHOOTING**

- Is the earmold “icky”? Change the wax trap.
 - Do you need a new battery?
 - Is the battery in the right way?
 - (+ goes up)
 - Do you need to “sync” the transmitter and receiver?
- iSense Beep Vocabulary:
3 beeps every 5 secs= replace wax trap
3 long beeps = replace battery

.....THEN CALL OR EMAIL

TRY THIS FIRST. IF ALL ELSE FAILS....

**TRANSMITTER TROUBLE
SHOOTING**

- Is the transmitter in the “on” position?
- Is the transmitter on the correct frequency?
- Does the transmitter have a charge?
- Is the microphone 4” from your mouth?
- Is the cord (antennae) for the microphone unwound and not kinked

**RECEIVER TROUBLE
SHOOTING**

- Is the earmold “icky”? Change the wax trap.
 - Do you need a new battery?
 - Is the battery in the right way?
 - (+ goes up)
 - Do you need to “sync” the transmitter and receiver?
- iSense Beep Vocabulary:
3 beeps every 5 secs= replace wax trap
3 long beeps = replace battery

.....THEN CALL OR EMAIL

TRY THIS FIRST. IF ALL ELSE FAILS....

**TRANSMITTER TROUBLE
SHOOTING**

- Is the transmitter in the “on” position?
- Is the transmitter on the correct frequency?
- Does the transmitter have a charge?
- Is the microphone 4” from your mouth?
- Is the cord (antennae) for the microphone unwound and not kinked

**RECEIVER TROUBLE
SHOOTING**

- Is the earmold “icky”? Change the wax trap.
 - Do you need a new battery?
 - Is the battery in the right way?
 - (+ goes up)
 - Do you need to “sync” the transmitter and receiver?
- iSense Beep Vocabulary:
3 beeps every 5 secs= replace wax trap
3 long beeps = replace battery

.....THEN CALL OR EMAIL

TRY THIS FIRST. IF ALL ELSE FAILS....

**TRANSMITTER TROUBLE
SHOOTING**

- Is the transmitter in the “on” position?
- Is the transmitter on the correct frequency?
- Does the transmitter have a charge?
- Is the microphone 4” from your mouth?
- Is the cord (antennae) for the microphone unwound and not kinked

**RECEIVER TROUBLE
SHOOTING**

- Is the earmold “icky”? Change the wax trap.
 - Do you need a new battery?
 - Is the battery in the right way?
 - (+ goes up)
 - Do you need to “sync” the transmitter and receiver?
- iSense Beep Vocabulary:
3 beeps every 5 secs= replace wax trap
3 long beeps = replace battery

.....THEN CALL OR EMAIL