



Trouble Shooting the FM!

Trouble Shooting the FM!



Trouble Shooting the FM!

Trouble Shooting the FM!

TRY THIS FIRST. IF ALL ELSE FAILS....

**TRANSMITTER TROUBLE
SHOOTING**

- Is the transmitter “on”?
- Is the transmitter on the correct frequency?
- Does the transmitter have a charge?
- Is microphone 4” from your mouth?
- Is the microphone cord (antennae) unwound and not kinked
- Is the microphone in the “on” positions ( or )
- Not The X

**RECEIVER TROUBLE
SHOOTING**

- Is the earmold “icky”? Clean out the wax!
- Is the receiver “on”?
 - (green dot showing)
- Do you need a new battery?
- Is the battery in the right way?
 - (+ goes up)
- Do you need to “sync” the transmitter and receiver?

.....THEN CALL OR EMAIL!

TRY THIS FIRST. IF ALL ELSE FAILS....

**TRANSMITTER TROUBLE
SHOOTING**

- Is the transmitter “on”?
- Is the transmitter on the correct frequency?
- Does the transmitter have a charge?
- Is microphone 4” from your mouth?
- Is the microphone cord (antennae) unwound and not kinked
- Is the microphone in the “on” positions ( or )
- Not The X

**RECEIVER TROUBLE
SHOOTING**

- Is the earmold “icky”? Clean out the wax!
- Is the receiver “on”?
 - (green dot showing)
- Do you need a new battery?
- Is the battery in the right way?
 - (+ goes up)
- Do you need to “sync” the transmitter and receiver?

.....THEN CALL OR EMAIL!

TRY THIS FIRST. IF ALL ELSE FAILS....

**TRANSMITTER TROUBLE
SHOOTING**

- Is the transmitter “on”?
- Is the transmitter on the correct frequency?
- Does the transmitter have a charge?
- Is microphone 4” from your mouth?
- Is the microphone cord (antennae) unwound and not kinked
- Is the microphone in the “on” positions ( or )
- Not The X

**RECEIVER TROUBLE
SHOOTING**

- Is the earmold “icky”? Clean out the wax!
- Is the receiver “on”?
 - (green dot showing)
- Do you need a new battery?
- Is the battery in the right way?
 - (+ goes up)
- Do you need to “sync” the transmitter and receiver?

.....THEN CALL OR EMAIL!

TRY THIS FIRST. IF ALL ELSE FAILS....

**TRANSMITTER TROUBLE
SHOOTING**

- Is the transmitter “on”?
- Is the transmitter on the correct frequency?
- Does the transmitter have a charge?
- Is microphone 4” from your mouth?
- Is the microphone cord (antennae) unwound and not kinked
- Is the microphone in the “on” positions ( or )
- Not The X

**RECEIVER TROUBLE
SHOOTING**

- Is the earmold “icky”? Clean out the wax!
- Is the receiver “on”?
 - (green dot showing)
- Do you need a new battery?
- Is the battery in the right way?
 - (+ goes up)
- Do you need to “sync” the transmitter and receiver?

.....THEN CALL OR EMAIL!